

PREXISO T.O.2



User Manual
Version 1.1

PREXISO

Introduction

Purchase

Congratulations on the purchase of a T.O.2 instrument.



This manual contains important safety directions as well as instructions for setting up the product and operating it. Refer to "7 Safety Directions" for further information. Read carefully through the User Manual before you switch on the product.



Product identification

The type and serial number of your product are indicated on the type plate. Enter the type and serial number in your manual and always refer to this information when you need to contact your agency or PREXISO authorised service workshop.

Type: _____

Serial No.: _____

Symbols

The symbols used in this manual have the following meanings:





Type	Description
 Danger	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 Warning	Indicates a potentially hazardous situation or an unintended use which, if not avoided, could result in death or serious injury.
 Caution	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in minor or moderate injury and/or appreciable material, financial and environmental damage.
	Important paragraphs which must be adhered to in practice as they enable the product to be used in a technically correct and efficient manner.

Table of Contents

In this manual

Chapter	Page
1 Description of the System	7
1.1 Instrument Case	7
1.2 Instrument Components	8
2 User Interface	10
2.1 Function of Buttons	10
2.2 Display	13
3 Preparation before Measurement	14
3.1 Preparation of Battery	14
3.2 Erection of the Instrument	16
3.3 Leveling up of the Instrument	16
3.4 Centering	17
3.5 Collimation	18
3.6 Initial Settings	18


4	Operation Method	22
4.1	Start Up	22
4.2	Measurement of Angle	23
4.3	Turning Off the Instrument	27
4.4	Measuring Distance Using the Stadia Method	28
4.5	Installation and Removal of the Base	29
5	Inspection and Adjustment	30
5.1	Tubular Vial	30
5.2	Circle Vial	31
5.3	Laser Plummet	31
5.4	Perpendicular of Vertical Hair of Reticle of Telescope	33
5.5	Collimation Error	34
5.6	Index Error of Vertical Circle	35
6	Care and Transport	37
6.1	Transport	37
6.2	Storage	38
6.3	Cleaning and Drying	39

7	Safety Directions	41
7.1	General	41
7.2	Intended Use	41
7.3	Limits of Use	42
7.4	Responsibilities	43
7.5	Hazards of Use	44
7.6	Laser Classification	50
7.6.1	General	50
7.6.2	Laser Plummet	51
7.7	Electromagnetic Compatibility EMC	53
8	Technical Data	56
8.1	Technical Data of the Instrument	56
8.2	Conformity to National Regulations	58
9	International Limited Warranty	59
10	Accessories	63
11	Error Information	64

1 Description of the System

1.1 Instrument Case


Instrument case

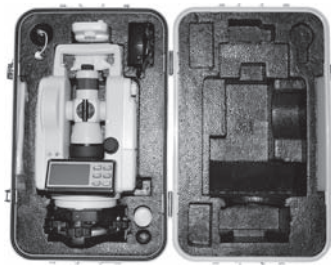

Before placing the instrument into the instrument case, align the dot mark of the instrument upward and on the same line, and lightly tighten the clamp knobs and loosen after the instrument is placed in the case. All the clamp knobs must be slightly tightened again after the instrument is in place in the case.


1.2 Instrument Components

Instrument components part 1 of 2

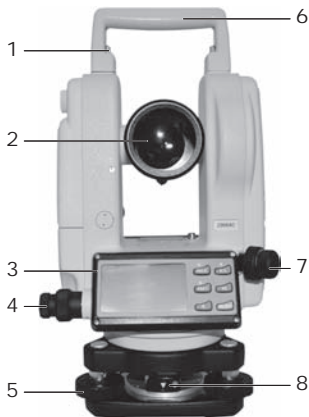

1. Screw of handle
 2. Objective lens
 3. LCD display I
 4. Horizontal drive
 5. Levelling screw
 6. Handle
 7. Laser plummet
 8. Tribrach locking lever
-

Instrument components part 2 of 2

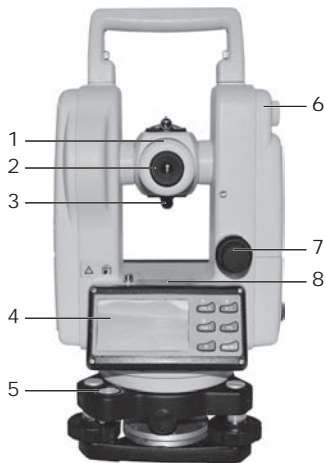

1. Focusing knob
2. Eyepiece
3. Optical sight
4. LCD display II
5. Circular vial
6. Battery case
7. Vertical drive
8. Tubular vial

2 User Interface

2.1 Function of Buttons





Description



1. R/L button
2. HOLD button
3. V% button
4. 0SET button
5. ON/OFF button
6. Light button

Buttons


Button	Function 1	Other
ON/OFF	Switch the instrument On/Off	<ol style="list-style-type: none"> 1. One of the function buttons for entering into initial setting of the instrument. 2. One of the function buttons for entering into index error setting. 3. One of the function buttons for entering into compensation setting.

Button	Function 1	Other
	Button for lightning of Reticle and LCD display	<ol style="list-style-type: none"> 1. One of the function buttons for entering into time setting. 2. Confirming button of time setting.
 0SET	Set horizontal angle to zero (zeroing)	<ol style="list-style-type: none"> 1. Menu selection button in initial setting. 2. One of the function buttons for entering into compensation setting. 3. One of the function buttons for entering into initial setting of the instrument.
 HOLD	Hold/release horizontal angle reading	<ol style="list-style-type: none"> 1. Menu selection button in initial setting. 2. One of the function buttons for entering into initial setting of the instrument. 3. One of the function buttons for entering into index error setting. 4. Selecting button of time setting.
 R/L	Switch between left and right increment of horizontal angle reading	<ol style="list-style-type: none"> 1. Menu selection button in initial setting. 2. One of the function buttons for entering into initial setting of the instrument. 3. Plus number to change the time.

Button	Function 1	Other
V%	Switch between display of vertical angle in angle unit or as percentage of slope	<ol style="list-style-type: none">1. One of the function buttons for entering into initial setting of the instrument.2. Button for confirmation after initial setting of the instrument.3. Minus number to change the time.

2.2 Display

Description

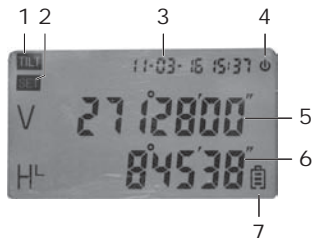

1. TILT
2. SET
3. Date and time
4. Auto power off
5. Vertical angel
6. Horizontal angel
7. Battery

Elements

Type	Description
TILT	"TILT" is displayed, as long as the compensator is "on".
SET	"SET" is displayed, as long as working in "set initial conditions".
Date and time	Shows the current date and time, according to the settings.
Auto power off	⏻ is displayed, when the auto power off function is "ON".
Battery	The battery symbol shows the current battery power level.

3 Preparation before Measurement

3.1 Preparation of Battery

Checking electric quantity

Refer to "4.1 Start Up" on how to check the power status of the battery.



Removal of AA-battery case

Before removal of any battery, the instrument must be switched off to avoid malfunction.



1. Turn the knob of the battery case and let the mark ▼ point to **UNLOCK**, take the battery case off.
2. Open the case cover, insert four AA batteries into the battery case according to + and -.



3. Insert the raised part at the bottom of the battery case into the slot of the right battery cover, and put the battery case in place. Then turn the knob and let the mark ▼ point to **LOCK**.



- The four batteries in the battery case should be of the same type.
- Do not use batteries which have different remaining capacities.
- When batteries are wet, dry them immediately, and put them out of the instrument case, air-dry thoroughly.

Recharging the Ni-MH battery pack

1. Connect the charger to a power source as indicated on the label of the charger. The green light on the charger is lit.
2. Insert the plug of the charger to the charging port of the Ni-MH battery pack. The green light of the charger turns red, the charging process is started, after 3 to 4 hours when the red light turns green, it indicates that the charging process is finished.


3.2 Erection of the Instrument

Erection of the instrument

1. Stretch the tripod to a proper height.
 2. Ensure that the measure point is exactly under the central hole of the tripod head.
 3. Level up the tripod (this is very important when centering with plumb bob).
 4. Ensure that all locking handles are securely tightened.
 5. Secure the instrument to the tripod.
-

3.3 Leveling up of the Instrument

Leveling up of the instrument

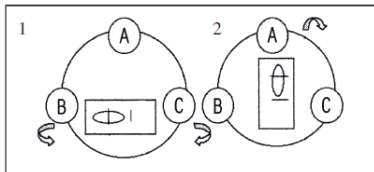

1. Centering the circle vial using leveling screws A, B and C.
2. Turn the collimation unit so that the axis of the tubular vial is parallel to the connecting line of B and C. Adjust B and C so that the tubular vial is centered.
3. Turn the collimation 90° adjust the leveling screw A and make the bubble sit in the center.
4. Repeat 2. to 3., until the bubble is in the center for both directions.


- After 2. is finished, turn collimation unit for 180° . If the tubular vial is still centered, the leveling up of the instrument is finished. If the bubble strays from the center, perform leveling up with the procedure for adjustment of tubular vial in "5.1 Tubular Vial".

3.4 Centering

Centering with plumb bob

- Tie the plumb bob wire to the hook on the central screw. Adjust the length of the wire so that the tip of the bob is 2 mm above ground.
- Loosen the central screw and move the base so that the tip of the plumb bob is precisely positioned to the ground point (when observed from two directions perpendicular to each other).

Centering with Optical plummet

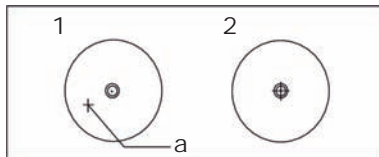

To ensure maximum measuring precision, we recommend the performance of the steps described in "5 Inspection and Adjustment" before using this instrument.

- Turn the knob of the eyepiece of the optical plummet so that the reticle is in focus; turn the focusing knob so that the ground point **a** is in focus. Then, loosen the central screw

- to translate the whole instrument (be sure not to turn the instrument) so that the ground point coincides with the central point of the reticle. Retighten the central screw.
2. Perform precise leveling up of the instrument as described in "3.3 Leveling up of the Instrument" and repeat the operation in 1. of "3.4 Centering", "Centering with Optical plummet" until the instrument is precisely leveled up and the center of the reticle of the optical plummet precisely coincides with the ground point as shown.
-

3.5 Collimation

Adjustment of diopter

1. Aim with the telescope on a bright background.
 2. Turn the eyepiece knob so that the cross hairs of the reticle are clearly seen.
-




Elimination of optical parallax

1. Adjust the focusing knob so that the object forms image on the reticle.
 2. Move your eyes up and down to see if the image of the object moves relative to the graduation lines.
If it does not move, there is no optical parallax; otherwise turn the focusing knob to eliminate the optical parallax.
-

3.6 Initial Settings



Before start measuring, please confirm all initial settings. Items in bold indicate factory settings.

3. Press  button or  button for turning over pages and selecting options.
4. Press  button for selecting specific content in the options.
5. Finally, press **V%** button to confirm and enter into angle measuring mode.

Setting of items


1. Unit of angle

- UNIT A: 360° (Degree)
- UNIT B: 400 (GON)
- UNIT C: 6400 (Mil)




2. Zero position of vertical angle

- ZEN==0: Zenith being 0°
- ZEN==90: Zenith being 90°

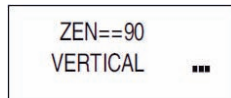


3. Auto power off time

- NO OFF: Auto power off disabled
- 30 OFF: Turns power off if no action is done within 30 min

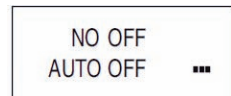

4. Minimum display resolution
- DSP 1: minimum display being 1"
 - DSP 5: minimum display being 5"
 - DSP 10: minimum display being 10"

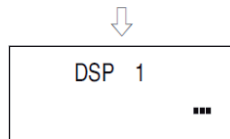

5. Setting of tilt sensor
- V TILT ON: Turn on the tilt sensor
 - V TILT OFF: Turn off the tilt sensor



6. Indication of horizontal angle
- NO BEEP: Horizontal angle indicator disabled
 - 90 BEEP: Gives out beep when the instrument is close to 0°, 90°, 180° and 270°



Set Date & Time



Press and hold LIGHT and 0SET button while turning on the instrument. The instrument shows ADJ2 and will switch automatically to the settings for date and time. Press HOLD to move between fields, R/L to increase, V% to decrease. Press LIGHT button to confirm and exit.

4 Operation Method

4.1 Start Up

Start up

1. Press and hold **ON/OFF** button.
2. Release **ON/OFF** button when full character display appears:
3. Sway the telescope up and down ward when the instrument is at the normal position. The beeper beeps and LCD displays vertical angle. The instrument enters into measuring mode.
4. After the power is switched on and the instrument has entered into measuring mode, the battery power level is indicated by the battery symbol in the lower right corner of LCD.
 - If three bars are shown the battery is fully charged.
 - A flashing battery symbol indicates a low power status of the battery. Turn off the instrument and change to a new battery to avoid an automatic switch off by the instrument.

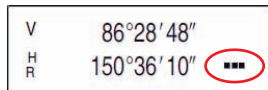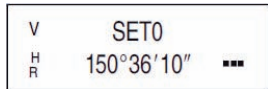

4.2 Measurement of Angle

Observing in the "Normal" and "Reverse" Positions of the Telescope

The normal position of the telescope refers to observation with the object lens facing right ahead (the vertical encoder being on the left); the reverse position refers to observation with the object lens facing right ahead (the vertical encoder being on the right). The mechanical errors can be offset by the average of the values of measured in the normal and reverse positions.



Normal



Reverse

Measurement of vertical angle

1. Measurement of 0° angle of vertical angle

0° angle position can be set as follows in the initial setting:



2. Compensation of the tilt sensor to vertical angle

- The working range of the vertical tilt sensor is $\pm 3'$. Within this range the vertical readings will be corrected.

V	90°00'10"	
H R	108°36'38"	...



- If the inclination is greater than $\pm 3'$, the instrument will display as shown in the figure

V	TILT	
H R	108°36'38"	...

3. Display of slope

Press **V%** button, the vertical angle display is turned into slope display; press **V%** button, the vertical angle display is resumed.

V	69°11'00"	
H R	108°36'38"	...



When vertical angle is turned into slope, the precision of slope is to the fourth digit after the decimal.

The value of the slope is shown in the range of $\pm 99.99\%$ ($\pm 45^\circ$); outside of this range no value is displayed.

V	38.88%	
H R	108°36'38"	...



V	69°11'00"	
H R	108°36'38"	...

Measurement of horizontal angle

1. Reset of horizontal angle

Press **OSET** button.

The horizontal angle returns to zero.

V	90°00'10"	
H R	150°36'10"	...



V	90°00'10"	
H R	00°00'00"	...

2. Selecting the direction of measurement of horizontal angle

Press **R/L** button to change the direction of measurement of horizontal angle.

V	90°00'10"	
H R	150°36'10"	...



V	90°00'10"	
H L	209°23'50"	...

- When **HR** is displayed, the angle increases with clockwise turning of the collimation unit.
- When **HL** is displayed, the angle increases with counter-clockwise turning of the collimation unit.

3. Holding horizontal angle

Press **HOLD** button, the horizontal angle will be held; the reading of the horizontal angle will remain unchanged even if the direction of collimation is changed.

V	90°00'10"	
H R	150°36'10"	---



Press **HOLD** button again, the hold of horizontal angle is released.

V	90°00'10"	
H R	150°36'10"	---

4.3 Turning Off the Instrument

Turning off



1. Press **ON/OFF** button.
OFF will be displayed at the position of vertical angle display after a beep.
2. Release **ON/OFF** button.
The instrument is turned off.

V	OFF	
H R	150°36'10"	---

4.4 Measuring Distance Using the Stadia Method

Measuring distance using the Stadia method

1. Take reading l from the staff gauge using the Stadia hair on the reticle of the telescope.
2. Multiply reading l by 100, we obtain the actual distance L from the target to the measured point. (100 is the multiplication constant error of the instrument, i.e., $L = l \times 100$)

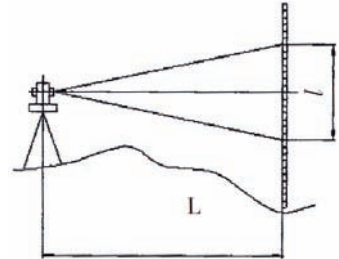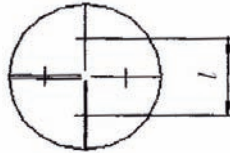

4.5 Installation and Removal of the Base


Remove of the base



1. Turn the screw on knob **a** outward using flat screw driver until it no more limits position.
2. Turn knob **a** counter-clockwise, holding the base with one hand and take the main body of the instrument off the base.

Installation of the base



1. Turn the knob **a** counter-clockwise until it reaches the position limit.
2. Make the positioning block **b** on the main body of the instrument in line with the notch **c** on the base and install the main body onto the base as shown.
3. Turn the knob **a** clockwise until it reaches the position limit so that the  mark points downward.
4. Turn the screw until it can limit position.

5 Inspection and Adjustment

5.1 Tubular Vial

Inspection

1. Fix the instrument to the tripod and roughly level up the instrument and make the tubular vial parallel to the connecting line of two of the three leveling screws on the base. Adjust the two leveling screws so that the tubular vial is centered.
 2. Turn the instrument 180° and check if the water bubble remains at the center.
 3. If the water bubble remains at the center, no adjustment is required; otherwise, perform adjustment as follows.
-

Adjustment



1. Adjust the bubble adjusting screw so that the bubble moves toward tube center for half the off-center.
 2. Turn the leveling screw to correct the other half off-center so that the bubble stays at the center.
 3. Repeat the steps in "Inspection" and "Adjustment" until the long water level is centered when the instrument is at any position.
-

5.2 Circle Vial

Inspection and Adjustment



After making sure that the long water level is correctly adjusted, check if there is any off-center with the round water level. If there is no off-center, no adjustment is required; otherwise, adjust the three adjustment screws with needle as shown to center the bubble.

5.3 Laser Plummet

Turning the laser plummet on/off


With turned on instrument turn on the laser plummet by pushing the ☼ button on the keyboard. To turn off the laser plummet, press the ☼ button again.

Inspection

1. Set the instrument on the tripod (no adjustment is required).
2. Place the cross mark exactly under the instrument.
3. With turned on instrument turn on the laser plummet by pushing the ☼ button.
4. Turn the instrument for 180°.

5. If the laser point remains at the center of the cross mark, no adjustment is required; otherwise adjust as follows.

Adjustment

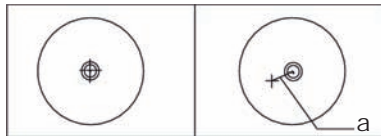


1. Remove the protective cover of the laser plummet and adjust the adjustment screws of the laser plummet, using the hexagonal wrench, so that the laser point moves the half of the offset a towards the cross mark.
2. Repeat the steps 2. to 5. in "Inspection" and step 1. in "Adjustment" until the laser point superposition.

5.4 Perpendicular of Vertical Hair of Reticle of Telescope

Inspection

1. Fix the instrument on the tripod and perform precise leveling up.
 2. Set a target point A 50 m away from instrument.
 3. Aim the telescope at target point A and adjust the vertical fine movement. If point A moves along the vertical hair of the reticle, no adjustment is required; perform adjustment if the target point A strays from the vertical hair.
-

Adjustment

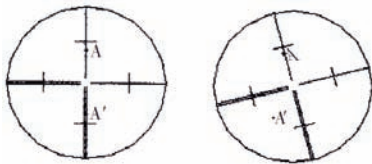

1. Remove the protective cover of the reticle and slightly loosen the four adjusting screws. Turn the assembly so that point A coincides with the vertical hair. Retighten the four adjusting screws.
 2. Repeat step 3. in "Inspection" and step 1. in "Adjustment" until there is no error.
-

5.5 Collimation Error

Inspection

1. Fix the instrument on the tripod and perform precise leveling up.
 2. Aim at object point A in the distance with the normal position of telescope and take the reading of the horizontal angle HR_{norm} and aim at object A with the reverse position of the telescope and take the reading of the horizontal angle HR_{rev} then:
Collimation Error $C = (HR_{norm} - HR_{rev} \pm 180^\circ)/2$
If $C < 10''$, no adjustment is required; if $C > 10''$, adjustment is required.
-

Adjustment

1. Adjust the horizontal fine motion in the reverse position of the telescope so that the reverse reading $HR_{rev}' = HR_{rev} + C$.
 2. Remove the protective cover of the reticle of the telescope and adjust both the left and right adjusting screws so that the vertical hair of the reticle coincides with object A.
 3. Repeat the steps in "Inspection" and "Adjustment" until acceptable condition is reached.
-

5.6 Index Error of Vertical Circle

Inspection

1. Fix the instrument on the tripod and perform precise leveling up.
 2. Aim the telescope at any object point P in the normal position and take the reading of vertical angle V_{norm} .
 3. Turn the telescope to the reverse position and aim it at point P again. Take the reading of other vertical angle V_{Rev} .
 4. If $(V_{norm} + V_{Rev}) - 360^\circ = 2I$, $I \leq 15''$, no adjustment is required; otherwise, perform adjustment.
-

Adjustment

1. Press and hold **R/L + HOLD** buttons and press **ON/OFF** button. Release **ON/OFF** button when full character display appears and release **R/L + HOLD** buttons when four beeps are heard.
2. Sway the telescope near horizontal plane with instrument in the normal position and allow vertical angle to be reset after zero cross. Aim the telescope in the normal position at object P and press **OSET** to confirm.



3. Aim the telescope in the reverse position at object P and press **OSET** to confirm. With this, the compensation of index error is completed.

V	272°36'06"
H R	FACE-2 ***



V	90°00'10"
H R	150°36'10" ***

6 Care and Transport

6.1 Transport

Transport in the field	<p>When transporting the equipment in the field, always make sure that you</p> <ul style="list-style-type: none">• either carry the product in its original transport container,• or carry the tripod with its legs splayed across your shoulder, keeping the attached product upright.
Transport in a road vehicle	<p>Never carry the product loose in a road vehicle, as it can be affected by shock and vibration. Always carry the product in its transport container and secure it.</p>
Shipping	<p>When transporting the product by rail, air or sea, always use the complete original PREXISO packaging, transport container and cardboard box, or its equivalent, to protect against shock and vibration.</p>
Shipping, transport of batteries	<p>When transporting or shipping batteries, the person in charge of the product must ensure that the applicable national and international rules and regulations are observed. Before transportation or shipping, contact your local passenger or freight transport company.</p>
Field adjustment	<p>After transport inspect the field adjustment parameters given in this user manual before using the product.</p>

6.2 Storage

Product

Respect the temperature limits when storing the equipment, particularly in summer if the equipment is inside a vehicle. Refer to "8 Technical Data" for information about temperature limits.

Field adjustment

After long periods of storage inspect the field adjustment parameters given in this user manual before using the product.

Batteries

- Refer to "8 Technical Data" for information about storage temperature range.
- At the recommended storage temperature range, batteries containing a 10% to 50% charge can be stored for up to one year. After this storage period the batteries must be recharged.
- Remove batteries from the product and the charger before storing.
- After storage recharge batteries before using.
- Protect batteries from damp and wetness. Wet or damp batteries must be dried before storing or use.

For Ni-MH battery pack:

- A storage temperature range of 0°C to +20°C/+32°F to 68°F in a dry environment is recommended to minimise self-discharging of the battery.

For alkaline batteries:

- If the equipment is to be stored for a long time, remove the alkaline batteries from the product in order to avoid the danger of leakage.
-

6.3 Cleaning and Drying

Objective, eyepiece and reflectors

- Blow dust off lenses and prisms.
 - Never touch the glass with your fingers.
 - Use only a clean, soft, lint-free cloth for cleaning. If necessary, moisten the cloth with water or pure alcohol. Do not use other liquids; these may attack the polymer components.
-

Charger and batteries


- Use only a clean, soft, lint-free cloth for cleaning.
-

Fogging of prisms

Reflector prisms that are cooler than the ambient temperature tend to fog. It is not enough simply to wipe them. Keep them for some time inside your jacket or in the vehicle to allow them to adjust to the ambient temperature.

Damp products

Dry the product, the transport container, the foam inserts and the accessories at a temperature not greater than 40°C /104°F and clean them. Do not repack until everything is completely dry. Always close the transport container when using in the field.

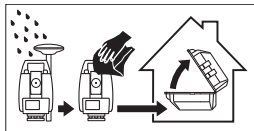

Cables and plugs

Keep plugs clean and dry. Blow away any dirt lodged in the plugs of the connecting cables.

7 Safety Directions

7.1 General

Description

The following directions enable the person responsible for the product, and the person who actually uses the equipment, to anticipate and avoid operational hazards.

The person responsible for the product must ensure that all users understand these directions and adhere to them.

7.2 Intended Use

Permitted use

- Measuring horizontal and vertical angles.
 - Visualizing the aiming direction and vertical axis.
 - Computing by means of software.
-

Adverse use

- Use of the product without instruction.
- Use outside of the intended limits.
- Disabling safety systems.
- Removal of hazard notices.
- Opening the product using tools, for example screwdriver, unless this is specifically permitted for certain functions.
- Modification or conversion of the product.

- Use after misappropriation.
 - Use of products with obviously recognisable damages or defects.
 - Use with accessories from other manufacturers without the prior explicit approval of PREXISO.
 - Aiming directly into the sun.
 - Inadequate safeguards at the working site, for example when measuring on roads.
 - Deliberate dazzling of third parties.
 - Controlling of machines, moving objects or similar monitoring application without additional control- and safety installations.
-

 **Warning**

Adverse use can lead to injury, malfunction and damage.

It is the task of the person responsible for the equipment to inform the user about hazards and how to counteract them. The product is not to be operated until the user has been instructed on how to work with it.

7.3 Limits of Use

Environment

Suitable for use in an atmosphere appropriate for permanent human habitation: not suitable for use in aggressive or explosive environments.

**Environment
charger**

Suitable for use in dry environments only and not under adverse conditions.



 **Danger**

Local safety authorities and safety experts must be contacted before working in hazardous areas, or close to electrical installations or similar situations by the person in charge of the product.

7.4 Responsibilities

**Manufacturer of the
product**

PREXISO AG, CH-8152 Glattbrugg, hereinafter referred to as PREXISO, is responsible for supplying the product, including the user manual and original accessories, in a safe condition.

**Manufacturers of
non PREXISO acces-
sories**

The manufacturers of non PREXISO accessories for the product are responsible for developing, implementing and communicating safety concepts for their products, and are also responsible for the effectiveness of those safety concepts in combination with the PREXISO product.

**Person in charge of
the product**

The person in charge of the product has the following duties:

- To understand the safety instructions on the product and the instructions in the user manual.
- To be familiar with local regulations relating to safety and accident prevention.

- To inform PREXISO immediately if the product and the application becomes unsafe.
-

 **Warning**

The person responsible for the product must ensure that it is used in accordance with the instructions. This person is also accountable for the training and the deployment of personnel who use the product and for the safety of the equipment in use.


7.5 Hazards of Use

 **Warning**

The absence of instruction, or the inadequate imparting of instruction, can lead to incorrect or adverse use, and can cause accidents with far-reaching human, material, financial and environmental consequences.

Precautions:

All users must follow the safety directions given by the manufacturer and the directions of the person responsible for the product.

 **Caution**

Watch out for erroneous measurement results if the product has been dropped or has been misused, modified, stored for long periods or transported.

Precautions:

Periodically carry out test measurements and perform the field adjustments indicated in the user manual, particularly after the product has been subjected to abnormal use and before and after important measurements.

 **Danger**

Because of the risk of electrocution, it is dangerous to use poles and extensions in the vicinity of electrical installations such as power cables or electrical railways.

Precautions:

Keep at a safe distance from electrical installations. If it is essential to work in this environment, first contact the safety authorities responsible for the electrical installations and follow their instructions.




 **Warning**

If the product is used with accessories, for example masts, staffs, poles, you may increase the risk of being struck by lightning.

Precautions:





Do not use the product in a thunderstorm.


 **Caution**

Be careful when pointing the product towards the sun, because the telescope functions as a magnifying glass and can injure your eyes and/or cause damage inside the product.

Precautions:

Do not point the product directly at the sun.

-
-  **Warning** During dynamic applications, for example stakeout procedures there is a danger of accidents occurring if the user does not pay attention to the environmental conditions around, for example obstacles, excavations or traffic.
Precautions:
The person responsible for the product must make all users fully aware of the existing dangers.
-
-  **Warning** Inadequate securing of the working site can lead to dangerous situations, for example in traffic, on building sites, and at industrial installations.
Precautions:
Always ensure that the working site is adequately secured. Adhere to the regulations governing safety and accident prevention and road traffic.
-
-  **Warning** If computers intended for use indoors are used in the field there is a danger of electric shock.
Precautions:
Adhere to the instructions given by the computer manufacturer regarding field use with PREXISO products.
-
-  **Caution** If the accessories used with the product are not properly secured and the product is subjected to mechanical shock, for example blows or falling, the product may be damaged or people can sustain injury.
Precautions:
When setting-up the product, make sure that the accessories are correctly adapted, fitted, secured, and locked in position.
Avoid subjecting the product to mechanical stress.

 **Caution**

During the transport, shipping or disposal of batteries it is possible for inappropriate mechanical influences to constitute a fire hazard.

Precautions:

Before shipping the product or disposing of it, discharge the batteries by running the product until they are flat.

When transporting or shipping batteries, the person in charge of the product must ensure that the applicable national and international rules and regulations are observed. Before transportation or shipping contact your local passenger or freight transport company.

 **Warning**

Using a battery charger not recommended by PREXISO can destroy the batteries. This can cause fire or explosions.

Precautions:

Only use chargers recommended by PREXISO to charge the batteries.

 **Warning**

High mechanical stress, high ambient temperatures or immersion into fluids can cause leakage, fire or explosions of the batteries.

Precautions:

Protect the batteries from mechanical influences and high ambient temperatures. Do not drop or immerse batteries into fluids.

 **Warning**

If battery terminals come in contact with jewellery, keys, metallised paper or other metals, short circuited battery terminals can overheat and cause injury or fire, for example by storing or transporting in pockets.

Precautions:

Make sure that the battery terminals do not come into contact with metallic objects.

 **Warning**

Batteries not recommended by PREXISO may be damaged if charged or discharged. They may burn and explode.

Precautions:

Only charge and discharge batteries recommended by PREXISO.

 **Warning**

If the product is improperly disposed of, the following can happen:

- If polymer parts are burnt, poisonous gases are produced which may impair health.
- If batteries are damaged or are heated strongly, they can explode and cause poisoning, burning, corrosion or environmental contamination.
- By disposing of the product irresponsibly you may enable unauthorised persons to use it in contravention of the regulations, exposing themselves and third parties to the risk of severe injury and rendering the environment liable to contamination.

Precautions:

The product must not be disposed with household waste.

Dispose of the product appropriately in accordance with the national regulations in force in your country.

Always prevent access to the product by unauthorised personnel.

Product specific treatment and waste management information is available from PREXISO AG.

 **Warning**

Only PREXISO authorised service workshops are entitled to repair these products.



Danger

For the charger:

The product is not designed for use under wet and severe conditions. If unit becomes wet it may cause you to receive an electric shock.

Precautions:

Use the product only in dry environments, for example in buildings or vehicles. Protect the product against humidity. If the product becomes humid, it must not be used!



Warning

If you open the product, either of the following actions may cause you to receive an electric shock.

- Touching live components
- Using the product after incorrect attempts were made to carry out repairs.

Precautions:

Do not open the product. Only PREXISO authorised service workshops are entitled to repair these products.

7.6 Laser Classification

7.6.1 General

General

The following directions (in accordance with the state of the art - international standard IEC 60825-1 (2007-03) and IEC TR 60825-14 (2004-02)) provide instruction and training information to the person responsible for the product and the person who actually uses the equipment, to anticipate and avoid operational hazards.

The person responsible for the product must ensure that all users understand these directions and adhere to them.



Products classified as laser class 1, class 2 and class 3R do not require:

- laser safety officer involvement,
- protective clothes and eyewear,
- special warning signs in the laser working area

if used and operated as defined in this user manual due to the low eye hazard level.



Products classified as laser class 2 or class 3R may cause dazzle, flash-blindness and afterimages, particularly under low ambient light conditions.

7.6.2 Laser Plummet

General

The laser plummet built into the product produces a visible red laser beam which emerges from the bottom of the product.

The laser product described in this section, is classified as laser class 2 in accordance with:

- IEC 60825-1 (2007-03): "Safety of laser products".
- EN 60825-1 (2007-10): "Safety of laser products".

Class 2 laser products:

These products are safe for momentary exposures but can be hazardous for deliberate staring into the beam.

Description	Value
Maximum radiant power	0.95 mW
Pulse duration	c.w.
Pulse repetition frequency	c.w.
Wavelength	650 nm - 660 nm





From a safety perspective class 2 laser products are not inherently safe for the eyes.

Precautions:

Avoid staring into the beam or pointing the beam at other people.

Labelling

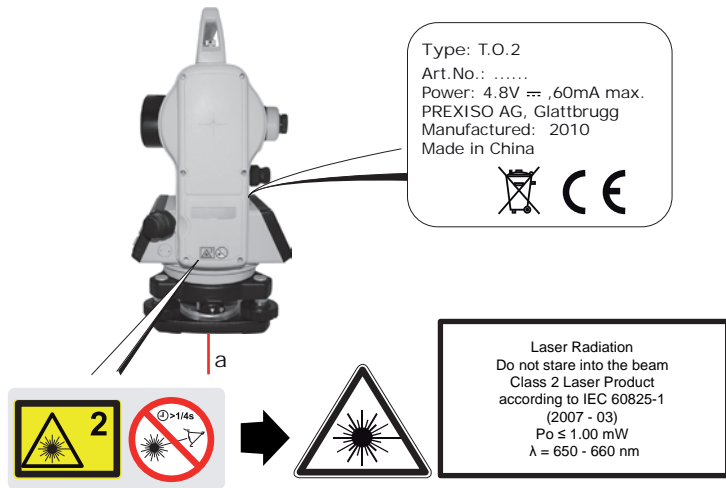

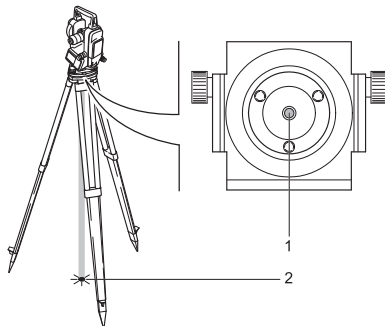

- 1 Exit for laser beam
- 2 Laser beam

7.7 Electromagnetic Compatibility EMC


Description

The term Electromagnetic Compatibility is taken to mean the capability of the product to function smoothly in an environment where electromagnetic radiation and electrostatic discharges are present, and without causing electromagnetic disturbances to other equipment.

 **Warning**

Electromagnetic radiation can cause disturbances in other equipment.

Although the product meets the strict regulations and standards which are in force in this respect, PREXISO cannot completely exclude the possibility that other equipment may be disturbed.

 **Caution**

There is a risk that disturbances may be caused in other equipment if the product is used with accessories from other manufacturers, for example field computers, personal computers, two-way radios, non-standard cables or external batteries.

Precautions:

Use only the equipment and accessories recommended by PREXISO. When combined with the product, they meet the strict requirements stipulated by the guidelines and standards. When using computers and two-way radios, pay attention to the information about electromagnetic compatibility provided by the manufacturer.

 **Caution**

Disturbances caused by electromagnetic radiation can result in erroneous measurements. Although the product meets the strict regulations and standards which are in force in this respect, PREXISO cannot completely exclude the possibility that the product may be disturbed by intense electromagnetic radiation, for example, near radio transmitters, two-way radios or diesel generators.

Precautions:

Check the plausibility of results obtained under these conditions.

 **Warning**

If the product is operated with connecting cables attached at only one of their two ends, for example external supply cables, interface cables, the permitted level of electromagnetic radiation may be exceeded and the correct functioning of other products may be impaired.

Precautions:

While the product is in use, connecting cables, for example product to external battery, product to computer, must be connected at both ends.

8 Technical Data

8.1 Technical Data of the Instrument

Telescope

Image:	Erect
Magnification ratio:	30x
Effective aperture of object lens:	45 mm
Angle of view:	1°30'
Shortest visibility distance:	1.35 m
Stadia multiplication constant:	100
Stadia addition constant:	0
Resolution:	3"

Angle Measuring System

Mode of angle measurement:	Photoelectric incremental reading
Minimum reading:	1", 5"
Detection method:	H: Dual side V: Single side
Precision of angle measurement:	2"
Unit of angle:	DEG, MIL, GON
Display:	LCD double side

Compensator

Tilt sensor:	Automatic vertical compensation
Range of compensation:	±3'

Laser plummet

Optical diameter:	≤ 2mm
Maximum radiant power:	0.95 mW

Sensitivity of vial

Tubular vial:	30" / 2 mm
Circular vial:	8' / 2 mm

Environmental specifications

Operating temperature:	0° C to +50° C
Storage temperature:	-20° C to +50°C
Protected against dust, sand and rain	
Humidity:	Max. 90% non condensing The effects of condensation are to be effectively counteracted by periodically drying out the instrument.

Power Supply

Type	Voltage	Operating time, typical
Alkaline batteries	4.8 V	36 h (with alkaline batteries)
Rechargeable Ni-MH batteries		

Dimensions

Height [mm]	Width [mm]	Length [mm]
340	164	154

Weight

Weight of instrument: 4.6 kg
(with batteries)

8.2 Conformity to National Regulations

Conformity to national regulations

Hereby, PREXISO, declares that the instrument is in compliance with the essential requirements and other relevant provisions of applicable European Directives. The declaration of conformity may be consulted at <http://www.prexiso.com/en/service/konformitaet.php> or <http://www.prexiso.com/de/service/konformitaet.php>.

9 International Limited Warranty

EXPRESS WARRANTY FOR HARDWARE

PREXISO AG (“PREXISO”), warrants to the original end user (“Customer”) that this Product will be free from defects in workmanship and materials, under normal use, for generally one (1) year, except for batteries for which ninety (90) days shall apply, unless such warranty period has been extended by PREXISO, and provided any and all operating and maintenance instructions are strictly respected, in particular in case of extreme and/or continuous applications/use of the Product. The warranty period begins on the proved purchase date (or if applicable, date of delivery or date of acceptance report). PREXISO’s sole obligation under this express warranty shall be, at PREXISO’s sole option and expense, to replace or repair the Product or part, or refund the purchase price paid for the Product. PREXISO warrants any repaired or replaced Product or part for a period of ninety (90) days from shipment, or through the end of the original warranty, whichever is longer. All Products or parts that are replaced become the property of PREXISO. This express warranty does neither cover consumables, such as reflectors, bulbs and fuses, nor third party products. This Warranty shall be null and void in case of installation, connection or use with the Product of any accessory other than authorised original PREXISO accessories.

EXPRESS WARRANTY FOR SOFTWARE

For “System Software” (defined as operating software and/or firmware necessary for switching on and running the Product), all provisions contained in this International Limited Warranty shall apply as for hardware. With respect to “Application Software” (defined as pre-installed or loadable on-board software and/or office or PC-based software for particular operations of the Product and/or data), the warranty provisions contained herein shall

expressly not apply. For further information on the scope of the warranty coverage for Application Software please refer to the correspondent Software License Agreement.

**OBTAINING
WARRANTY
SERVICE**

Customer must contact the authorised distributor of PREXISO within the applicable warranty period to obtain warranty service authorisation. Dated proof of original purchase from PREXISO or its authorised distributor and a description of the defect will be required. PREXISO is not responsible for Products or parts received without a warranty service authorisation. Repaired or replacement Products will be shipped to Customer at PREXISO' expense. The repaired product or part will be shipped as soon as reasonably possible. PREXISO shall not be responsible for any damages occurring during such shipment. PREXISO shall, at its sole discretion, decide on the place of performance for work under warranty. For Products forming part of a fixed installation, such place of performance shall be the site of such installation and PREXISO shall have the right to charge for additional costs for such services under warranty if the site of the Product is other than where the Product was originally installed or shipped.

**WARRANTY EXCLU-
SIVE**

Customer's sole remedy for breach of the warranty shall be the express warranty. The foregoing warranty is exclusive and is in lieu of all other warranties, terms or conditions, express or implied, either in fact or by operation of law, statutory or otherwise, including warranties, terms or conditions of merchantability, fitness for a particular purpose, satisfactory quality and non-infringement, any warranties arising by usage of trade, course of dealing or course of performance, any warranty that the Software is compatible with any particular hardware or software, that the Software will run properly on Customer's equipment and will not cause damage to Customer's equipment or data, and any warranty that the operation of the Software will be uninterrupted or "error free", all of which are expressly disclaimed.

PREXISO shall not be liable if the alleged defect or malfunction was caused by Customer's or any other person's misuse, neglect, improper installation, installation, connection or use with the Product of any accessory other than authorised original PREXISO accessories, unauthorised attempts to open, repair or modify the Product, inadequate maintenance, disregard of operating instructions, excessive load or stress, normal wear and tear, or any other cause beyond the range of its intended use, by accident, fire, or other hazards, or other cause not due or attributable to PREXISO. This warranty does not cover physical damage to the Product or malfunctions resulting from the use of the Product in conjunction with any sort of ancillary or peripheral equipment and PREXISO determines that there is no fault with the Product itself.

LIMITATION OF LIABILITY

TO THE EXTENT PERMITTED BY LAW, PREXISO ALSO EXCLUDES ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR COSTS OF PROCUREMENT OF SUBSTITUTE PRODUCTS BY CUSTOMER, OR FOR THE LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER INFORMATION OR FINANCIAL LOSS ARISING OUT OF OR IN CONSEQUENCE WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THIS PRODUCT, EVEN IF PREXISO OR ITS DISTRIBUTORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPLACEMENT, REPAIR, OR REFUND OF THE PURCHASE PRICE PAID, AT PREXISO'S OPTION. THIS LIMITATION OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THIS LIMITATION MAY NOT APPLY. IN THE EVENT THAT

APPLICABLE LAW DOES NOT ALLOW THE COMPLETE EXCLUSION OR LIMITATION OF LIABILITY OF CLAIMS AND DAMAGES AS SET HEREINBEFORE, LIABILITY IS LIMITED TO THE GREATEST EXTENT PERMITTED BY APPLICABLE LAW.

DISCLAIMER

Should a court of jurisdiction not allow the entire exclusion or limitation of implied warranties or the limitation of incidental or consequential damages for certain products supplied to consumers, or the limitation of liability for personal injury, such implied warranties and such liabilities will be limited to the duration of the applicable express warranty.

**GOVERNING LAW
AND PLACE OF
JURISDICTION**

This Limited Warranty shall be governed by the laws of Switzerland, excluding all conflict of laws principles and excluding the United Nations Convention on the International Sale of Goods dated 11 April 1980. The ordinary courts at the PREXISO registered office in Glattbrugg, Switzerland shall be competent. PREXISO shall, at its sole discretion, also be entitled to take legal action in the competent courts at the Customer's place of business or domicile.

With this Limited Warranty, PREXISO grants Customer specific legal rights which do not restrict any statutory consumer rights.



10 Accessories

List of accessories

- 1 set of plumb bob
 - 1 tool kit (containing a screw driver and 2 needles)
 - 2 bags of desiccant
 - 1 rain cover
 - 1 instruction manual
 - 1 charger
 - AA-battery case
 - 1 Ni-MH battery pack
 - 1 allen key
-

11 Error Information

Error codes

Display	Meaning and dealing method
E01	Count error,if displayed repetitively, repair is needed.
TOO FAST	The telescope or collimation unit rotated too fast, press any button except ON/OFF and  , the instrument returns to normal state.
E04	Horizontal sensor I error, repair is needed.
E05	Horizontal sensor II error, repair is needed.
E06	Vertical sensor error, repair is needed.
TILT	the tilt sensor out of range, level the instrument again, if invain, repair is needed.  Set off the tilt sensor, the instrument can work also.

PREXISO T.O.2

785191-1.1.0en, Original text

© 2011 PREXISO AG, Glattbrugg, Switzerland

PREXISO AG
www.prexiso.com

PREXISO